

How to change between metric and imperial:

1. Go to the Manage tab and select Project Units.
2. In the Project Units dialog, click the unit type you want to change (e.g., Length, Area, etc.).
3. Select the new imperial unit from the dropdown list.
4. Click OK to apply the changes.